






Screw Pack Usage for Replacement Steel Entry Door

Screw Pack Item # 16298

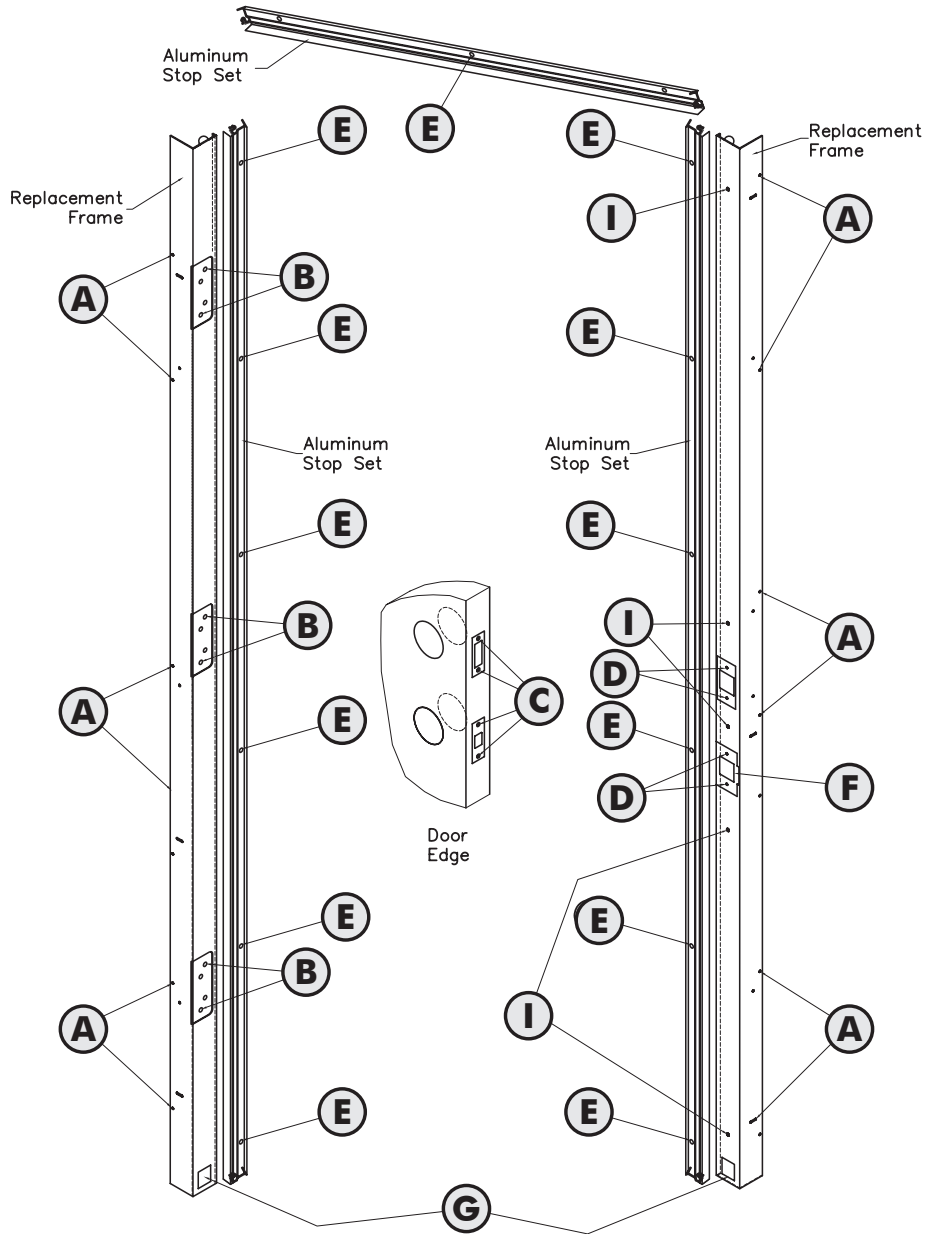



A 10 
Galvanized Nail
(For L-frame face) P#13413


B 6 
Brass #10 x 2" PFH Screw
(Hinge to sublock) P#13406


C 4 
Brass #8 x 1 1/2" PFH Screw
(For lock) P#13404


D 4 
Brass #8 x 5/32" PFH Screw
(For strike plates) P#13400

E 15 
Galvanized #8 x 1 1/2" PPH Screw
(For aluminum stop sets) P#13405

F 1 
Adjustable Strike Plate
P#13374

G 2 
Corner Pads
P#13372

H 2 
Clear Lexan Rings
(mounted under exterior knob to prevent scratching)
P#13510

I 5 
Brass #8 x 2" PFH Screw
(For frame) P#13404A